



GROUNDING NOTES:

- 1) NO. 6 BARE STRANDED COPPER WIRE SHALL BE INSTALLED IN CONDUIT WITH POWER SUPPLY AND CONNECTED TO GROUND ROD IN NEAREST PULL BOX.
- 2) CABINET SHALL BE GROUNDED TO THE NO. 6 BARE STRANDED COPPER WIRE.
- 3) GROUND ROD AND GROUND WIRE CONNECTIONS ARE SUBSIDIARY TO POLE INSTALLATION.

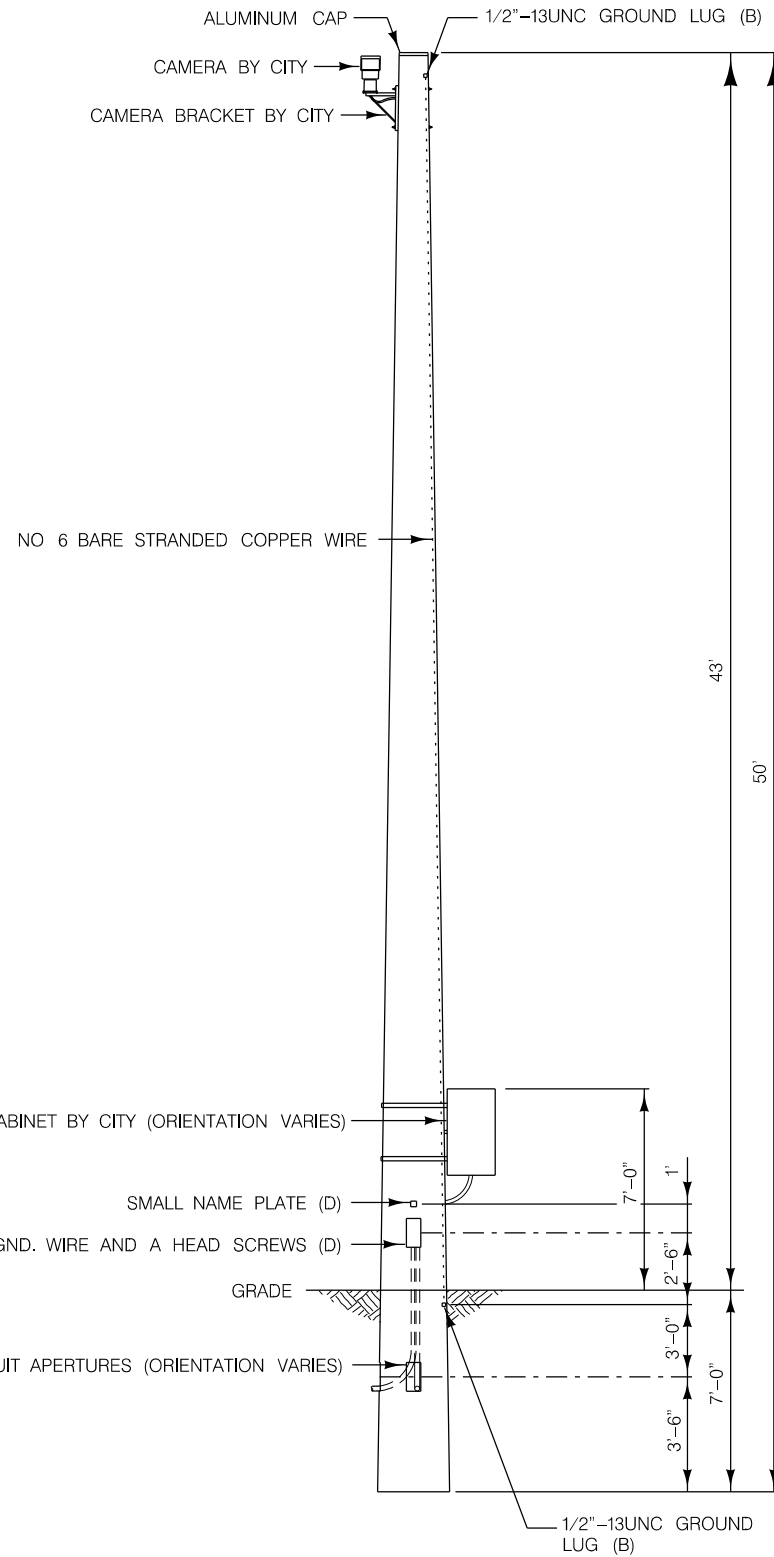

CONCRETE POLE

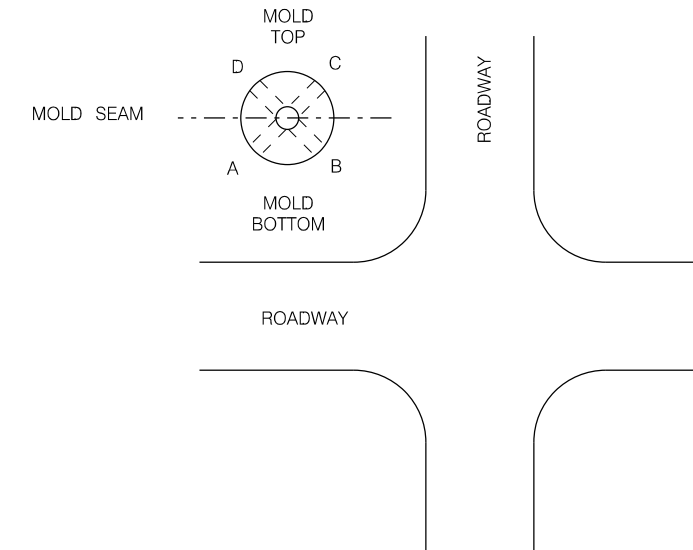


ORIENTATION DETAIL


NOTES:

HANDLING, TRANSPORTATION AND INSTALLATION OF POLE PER MANUFACTURER'S RECOMMENDATIONS, SHALL INCLUDE:

- 1) CHOKER THE POLE WITH A NYLON SLING 20-25% OF POLE LENGTH FROM TOP
- 2) ATTACH SLING TO HOOK AND LIFT, ALLOWING BUTT OF POLE TO REST ON GROUND UNTIL VERTICAL
- 3) LIFT POLE AND POSITION OVER AUGURED HOLE
- 4) LOWER POLE UNTIL BUTT RESTS ON BOTTOM CENTER OF HOLE
- 5) WHILE CONTINUING TO HOLD POLE, ADD BACKFILL, TAMPING EVERY 4"
- 6) CHECK FOR PLUMBNESS AFTER WHICH BELOW GRADE WIRING CAN BE MADE

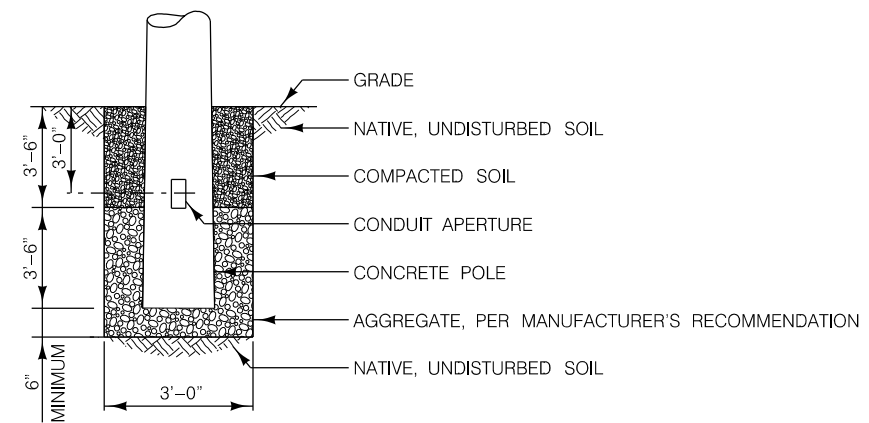

**CONCRETE POLE
EMBEDMENT DETAIL**

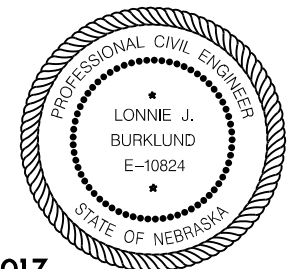

EFFECTIVE DATE MARCH 22, 2017

CONCRETE POLE