STREET TREE STAKING DETAIL

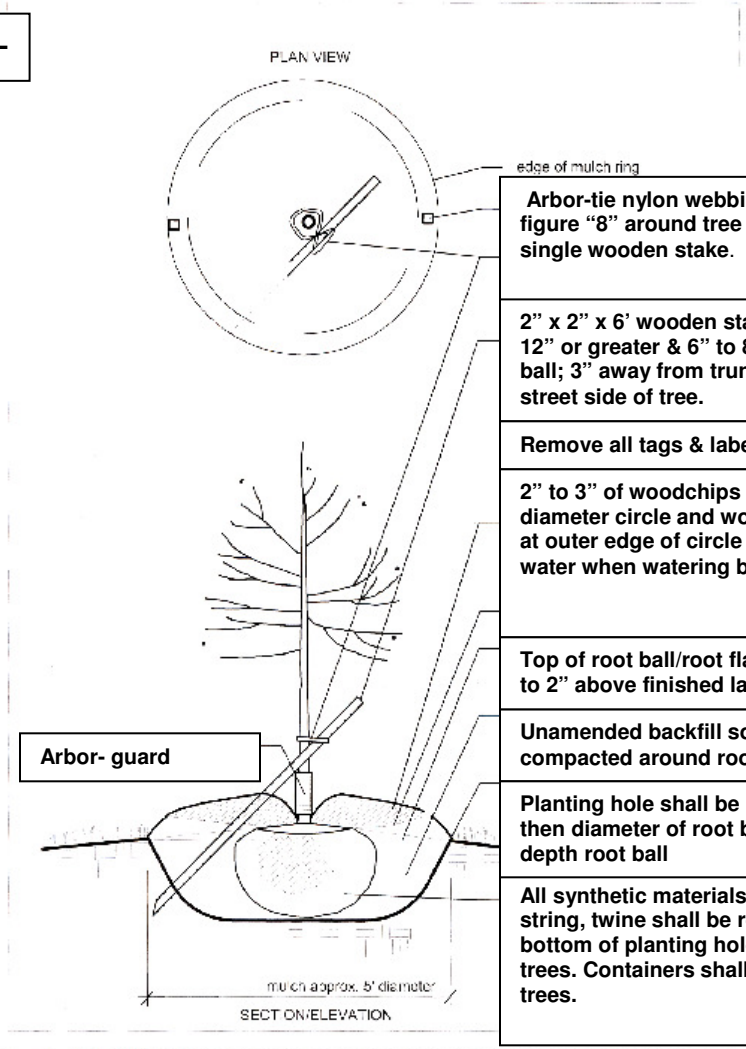

Arbor-tie nylon webbing placed in a figure "8" around tree trunk and single wooden stake.

2" x 2" x 6' wooden stake set to a depth of 12" or greater & 6" to 8" outside of root ball; 3" away from trunk. Install stake on street side of tree.

Remove all tags & labels

2" to 3" of woodchips in a 3' diameter circle and woodchip berm at outer edge of circle to contain water when watering by hose

Top of root ball/root flare shall be 1" to 2" above finished landscape

Arbor- guard

Unamended backfill soil loosely compacted around root ball

Planting hole shall be 1.5 to 2 times wider then diameter of root ball and no deeper then depth root ball

All synthetic materials, wire baskets, burlap, string, twine shall be removed to at least the bottom of planting hole on balled & burlapped trees. Containers shall be removed from container trees.

1 DECIDUOUS TREE PLANTING DETAIL FOR STREET TREES

Not to scale